



Universal Truck Tester Cable for Scully Connect® Cap Assembly



Scully Signal Company

70 Industrial Way, Wilmington, MA 01887-3479, USA
800 272 8559 • 617 692 8600 • sales@scully.com

U.K.

+44 (0) 1606 553805
sales@scullyuk.com

Europe

+32 (0) 15 56 00 70
sales@scully.be

India


+91 9821799566
sales@scully.com

User Guide




INSTRUCTIONS (5-WIRE ONLY)


- 1 Connect one end of the cable to the side port of the Scully Universal Truck Tester (UTT).
- 2 Turn on the unit and set the sensor type to "OPTIC".
- 3 Connect the other end of the cable to the Scully Connect cap of the last compartment.
- 4 Please ensure that there is a Termination Plug connected to the output of the first sensor cap.

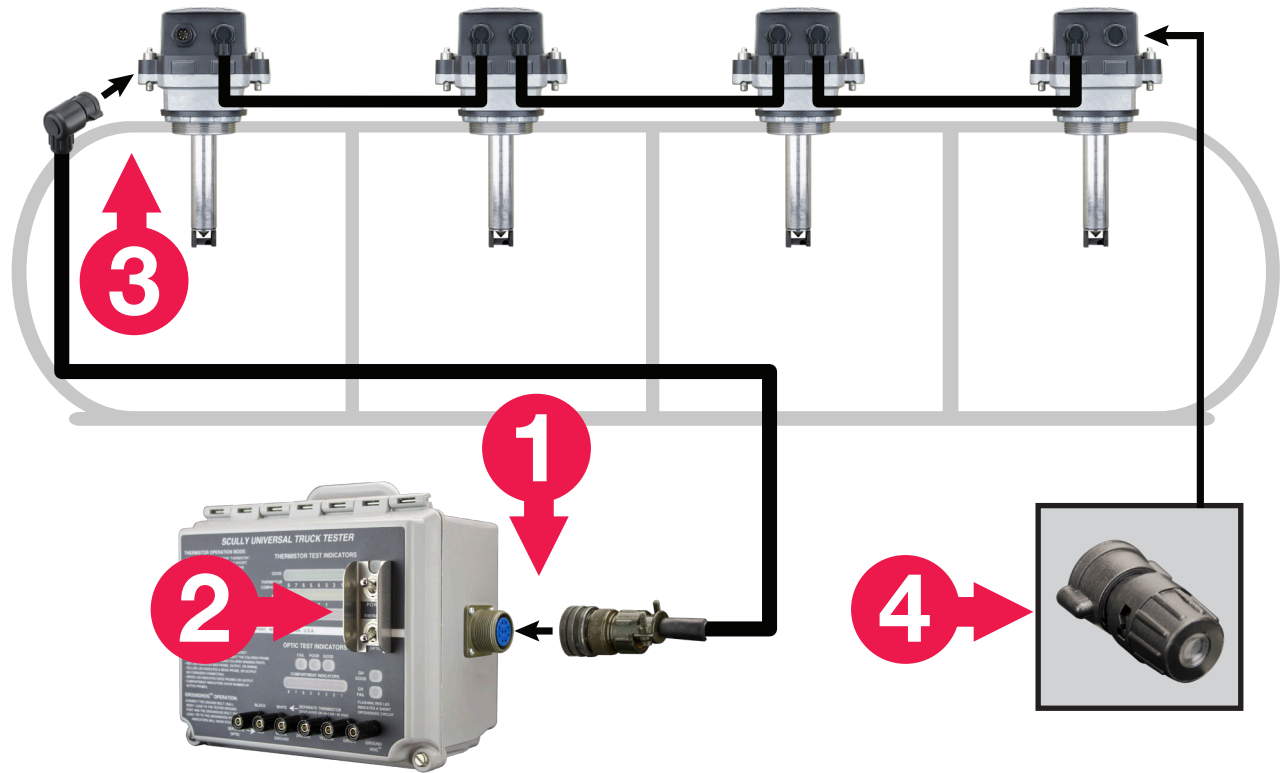

DISPLAY (Example: 4 Compartment Tank)

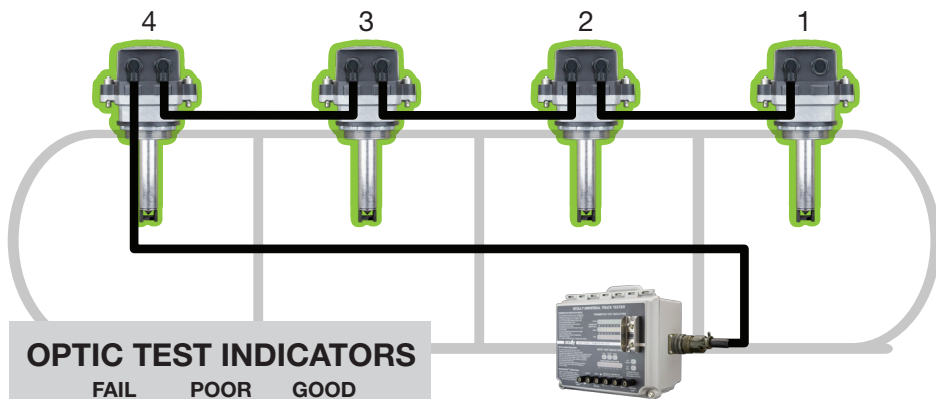

If all the sensors are working as expected, the UTT will display a flashing red light for all the compartments on the truck and show a sensor "GOOD" status with a green light.

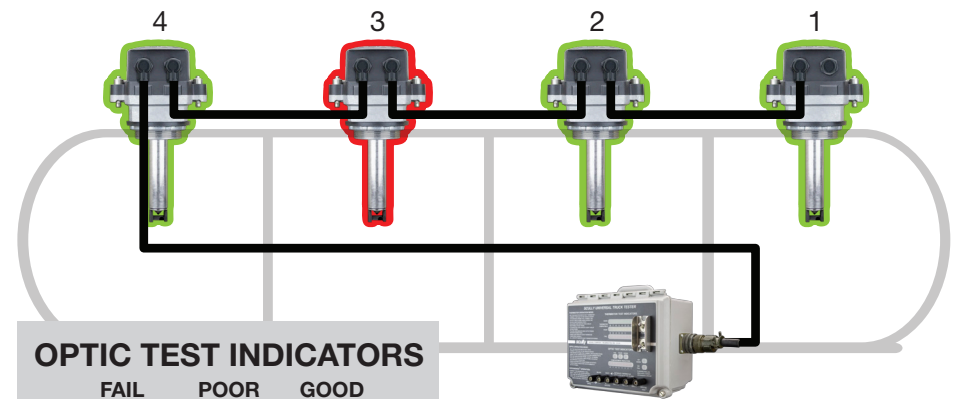


If any sensor is not working as expected, the UTT will display a flashing red light for all the compartments before the one with a malfunctioning sensor, and show a sensor "FAIL" status with a red light.

OPTIC TEST INDICATORS

FAIL POOR GOOD



COMPARTMENT INDICATORS

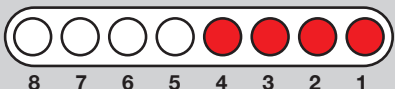

OPTIC TEST INDICATORS

FAIL POOR GOOD



COMPARTMENT INDICATORS

